

T190
7 2 3 4 9 5
Key name Key function

	Key name	Key function
1	Volume key	Adjust the volume
2	Up and Down key	To select the function or menu
3	Left-Soft- key / OK key	Performs the function indicated at the left bottom of the screen
4	Call key	Press to dial a phone number or answer a call or view the call history in the idle screen

 
5	Alpha numeric key	Press to enter characters 0-9 and the Alphabets a-z
6	Star key (*)	Enter the * & + character for calling features Press it in text mode to input symbols
7	SOS key	Press and hold 5 seconds to trigger alarm, in the meantime to make an emergency call and to send a SMS to the pre-set contacts
8	Right-soft- key	Performs the function indicated at the right bottom of the screen
9	Power key/ End key	Press it to exit to the standby mode. Press and hold it to power on/off the phone
10	Pound key(#)	Enter the pound [#] character for calling features in text mode, press it to change the input method.  Press and hold # to activate/deactivate the silent profile

### **BEFORE USING THE PHONE**


### Power on and off

To press Power key for 3s to turn on /off the phone






 Inserting SIM card / memory card and battery Turn the phone off Remove the battery cover & the battery



Insert SIM card into SIM slot

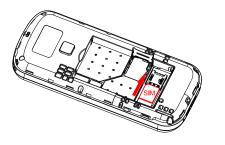

Note: Please use standard SIM card











If you have Micro-SIM or Nano SIM card, please change the type with using the SIM card adapter as shown below.

Charge the phone via USB port directly with a charger, or put the phone into the charging base (if contained in the package) which already connected to a charger.

Insert a Micro-SD card into the slot

> Emergency sms active: To turn on/off the

> Emergency sms: To pre-set the sms you need

> Emergency alert: To turn on/off the alert when

Note: when you press SOS for 5 seconds, the

phone will call the contacts when pre-set for

Emergency. It will call the first contact, when the

first contact don't answer the call, the phone will

send a SMS to the first contact and call the next

· Reset factory settings: To reset all data and

setting back to factory settings. The default

to send to the emergency contact

emergency SMS

vou press SOS kev

contact, and so on

### **Menu Introduction**

### 1. Messaging

9 Contacts

- Write message: To create a text message or a MMS, then send it to a contact.
- Inbox: Received Messages are listed in this menu.
- Outbox: The messages which are sent failed are
- Drafts: Draft messages are listed in this menu.
- Sentbox: Sent messages are listed in this menu.
- Templates: You can create pre-defined messages in this interface.
- Voice mail server: You can set voice mail through this function.
- Delete all: You can delete the messages in
- Settings: To set the parameter of message in this
- Message capacity: To check the capacity of

• Contacts: To add contact /to edit the contact

• Copy: To copy a contact from SIM to phone or

• Delete all: To delete all contact in phone or SIM

• Import/Export: To import or export the contact

• Speed dial: To set the speed dial No. here, you

can set 2-9 for speed dial. When you done to set

it, press and hold the key (2-9) to dial the contact

• Memory status: You can check the status of

the contact/ to delete the contact

· Add: To add a contact

from phone to SIM

from or to the phone

capacity for contact.

information/to send message to a contact/to call

反面

正面

### 2 Call logs

- All Call logs: It shows all call logs here
- Missed calls: There are the list of missed incoming calls
- Dialed calls: There are the list of outgoing calls
- Received calls: There are the list of received
- Rejected calls: There are the list of rejected incoming calls
- Delete all: To delete all call records
- Call timers: It display to calling duration time

It will search and save the FM channels automatically when you access in the first time. You can press '5' to play / pause the FM, '4' / '6' for



- Image: It will list all pictures in the phone or Micro SD card when you access this menu. Use Up/Down key to select a picture, press '5' key to
- Audio player: You can use this function to play audio files. You can press '5' to play / pause the music, '4' / '6' for previous/ next audio file



- Video player: You can use this function to play video files. You can press '5' to play / pause the music, '4' / '6' for previous/ next video file
- Sound recorder: Press '5' to start/pause to record the audio. Press Right-Soft-Key to stop and exit. Press Left-Soft-Key to access options for

### There are **General / Silent / Meeting** 3 profiles preset in the phone.

General is set for default, you can switch to Silent mode or Meeting mode as you wish Press and hold the [#] key for 2 seconds in idle mode, it will change the user profile General → Silent → Meeting → General...

- Calendar: Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events
- Calculator: The calculator can add, subtract, multiply and divide.
- Bluetooth: You can set Bluetooth parameter here • My files: To view the files in the phone or micro-
- World clock: You can set the time zone or set a home city
- Internet: To access to WAP

### 7. Settings

## > Flight mode: To turn on/off flight mode

- > Call divert: this function allow you to forward incoming calls to another number you have previously specified.
- > Call waiting: You can activate or turn off this function. When you activate Call waiting, it will remind you that there is an incoming call when you are on communication with all calling.
- Call barring: The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment ater, the network will make a response and send the operation results to the mobile phone.
- Auto redial: You can activate or turn off this function. If you set to activate it, it will redial the number which you just called but didn't be

- > Vibration when connected: If activate it, it will vibrate the phone when you answer a call
- > Auto record voice call: To record voice call automatically when enable this function.

### Phone settings

- > Date & time: To set date and time parameter
- > Language: To set the language as you needed > Auto power on/off: To set the time to power on /off automatically
- Notice: do not remove the battery if you activate this function
- > Wallpaper: To change the wallpaper picture
- > Brightness: To adjust the brightness of display > LCD backlight: To adjust the time duration of
- LCD backlight > Keypad backlight time: To adjust the time duration of keypad light

> Phone lock: To enable /disable this function. If you enable phone lock, it need you input the

- > Modify phone password: Input old password
- then input new password. The default phone password is 0000

phone password every time you power on the

- > Auto keypad lock: To set the keypad lock after
- > Lock screen by end-key: To enable/disable this function. If enable it, you can press Endkey to lock screen
- Blacklist: You can set some contacts or numbers in blacklist that they cannot make an incoming call to this phone
- > Whitelist: You can set some contacts or numbers in whitelist that only they can make an incoming call to this phone.
- Network settings: To set the network parameter

### SOS settings

- > SOS button active: To turn on/off the SOS
- > SOS numbers: You can set up to 5 emergency numbers for SOS

### 8. Alarm

You can access this menu by press  ${\bf [DOWN]}$  key in

idle mode

# password is **0000**, you can change it in the path of : Menu → Settings → Security → modify phone

• Own number: You can set the own number here

15

# T180 T190 英文说明书

工艺: 80g 书纸, 彩色双面印刷, 折页

展开尺寸: 560\*100mm 成品尺寸: 70\*100mm